



U
i
s
t
a
n
d
i
n
g

DM35S

Personal Monitor Amplifier
OWNER'S MANUAL



深圳市酷乐科技有限公司
SHENZHEN COOLMUSIC TECH CO.,LTD
www.coolmusic-tech.com.cn
www.coolmusic-tech.com



警告！重要的安全事项 连线之前请通读下述事项

- 1.使用时请使用随机附带的电源线，如要更换电源线请在专业人员指导下使用经过确认的电源线。
- 2.不要试图短接电源插座内部的保险丝或是使用非正确值的保险管。
- 3.不要自行维修机器！打开机箱可能使您的身体暴露于危险电压或其他危险情况之下。如需维修或者维护请找有资质的维修人员进行服务。
- 4.如果您是具有维修资质的服务人员请注意：
设备在任何被损坏的情况下都需要进行维修服务，其中包括：电源线缆破损断裂、插座头损坏、液体流入或者固体落入机器设备内部和设备被放置在潮湿或雨水环境当中等造成机器不能正常工作的情况。
- 5.不要将音箱置于潮湿的环境中存放或使用。
- 6.设备上不应放置诸如花瓶类的装满液体的物品。
- 7.当设备长时间不使用的情况下请将电源线从电源插座上拔下。
- 8.当需要插入电源线到插座时,应确保远离人行通道,并在使用完毕以后及时保管好电源线。
- 9.确保音箱的电源线所接的电源插座已进行了妥善的接地处理。

※ 请遵守上述所有警告和注意事项 ※ 请保留此手册以便需要时参考

感谢您选择购买我公司设计生产的 DM35S 电鼓音箱。在您首次使用本产品前，请仔细阅读本说明书

功能参数


额定功率：40W 有效值
功耗：50W 50/60hz 230 VAC
输入阻抗
Input1：68K
Input2：68K
输入灵敏度
Input1：-36db
Input2：-36db
EQ均衡系统
Bass：+/-15db@60hz
Treble：+/-15db@10Khz
喇叭：同轴喇叭(10 inch Woof + 1inch Tweeter)
尺寸：430mm*390mm*340mm(H*W*D)
净重：13KG
毛重：15KG

DMUSIC

DM35S


Indicator light:

1. Bluetooth waiting for connection: Indicator Light blue flashing;
2. Insert U disk/Bluetooth Connect to the mobile phone: Indicator light is normally on blue;
3. Single cycle: Indicator light is normally on purple.

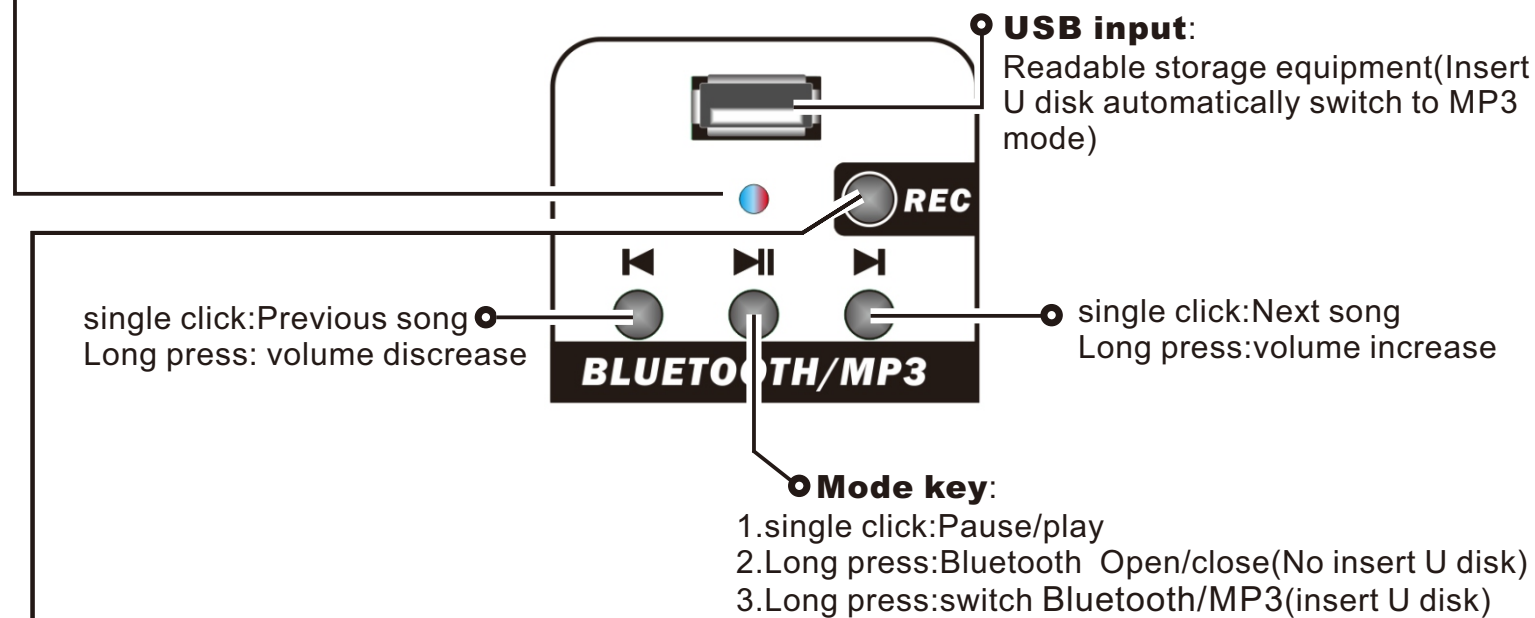

record key: (This button is invalid when no U disk is inserted)

 1. Insert U disk, single click to start recording (Indicator Light red flashing). Click again to end recording and play this recording (Click again to start a new recording).
2. play recording: Double-click the record button to delete the currently playing recording;
Long press the record button: switch play in order/Single cycle

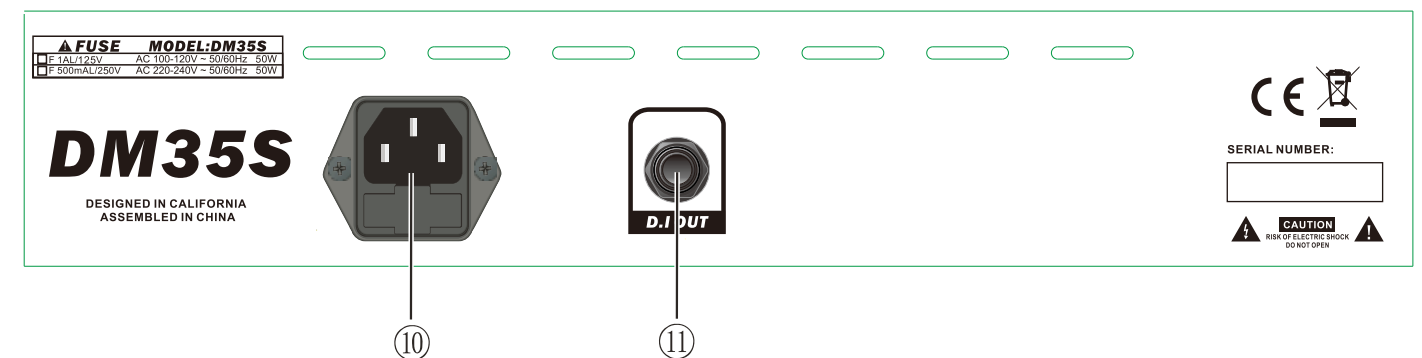


10.AC INLET SOCKET

Connect the included AC power cable to this inlet.

11.DI out

This socket provides a balanced low impedance output signal from pre amplifier taken before the Volume but after any tone correction, used for direct injection of amplifier signal to a mixing desk or additional power amplifier.

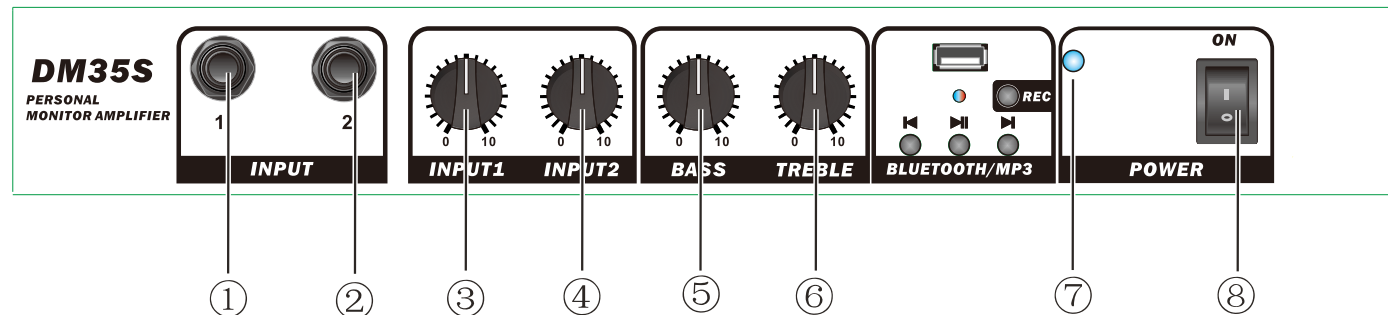

1.INPUT 1

Connect your electric drum.

2.INPUT 2

Connect your electric drum.

3.INPUT1 LEVEL

This knob adjusts the volume of channel one.

4.INPUT2 LEVEL

This knob adjusts the volume of channel two.

5.BASS

Adjust the amount of low frequency level.

6.TREBLE


Adjust the amount of high frequency level.

7.POWER INDICATOR

Indicator lights when power on.

8.POWER SWITCH

Switch ON/OFF the machine.

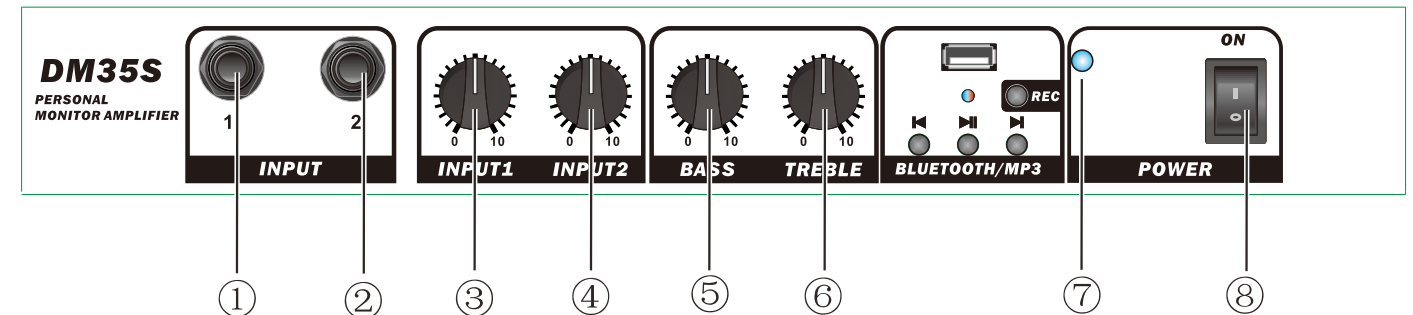

1.INPUT1线路输入

此插孔可连接各种乐器音源信号，电子鼓。

2.INPUT2线路输入

此插孔可连接各种乐器音源信号，电子鼓。

3.INPUT1 GAIN

该旋钮用于控制INPUT1输入的增益。

4.INPUT2 GAIN

该旋钮用于控制INPUT2输入的增益。

5.BASS

该旋钮用于提升或衰减INPUT1/2输入的音源的低频信号。

6.TREBLE

该旋钮用于提升或衰减INPUT1/2输入的音源的中高频信号。

7.Power电源指示灯

接通正确电源开机工作指示灯。

8.Power Switch 电源开关

确认接通正确电源，按下开关，机器可正常工作，同时Power LED 亮蓝色。

指示灯:

1. 蓝牙模式等待手机连接时: 蓝色闪烁;
2. 插入U盘/蓝牙连接到手机: 蓝色长亮;
3. 单曲循环时: 指示灯紫色常亮

● **USB接口:** 可读取储存设备(插入U盘时会自动切换到 MP3模式)

单击: 上一首歌曲
长按: 音量减小

单击: 下一首歌曲
长按: 音量增加

● Mode键:

1. 单击: 暂停/播放
2. 长按: 蓝牙 打开/关闭(没有插入U盘)
3. 长按: 切换 蓝牙/MP3功能(有插入U盘)


● 录音按键(无U盘接入时此按键无效):

1. 插入U盘, 单击开始录音(指示灯红色闪烁), 再次单击就结束录音并播放此段录音(再次单击则开始新的录音);
2. 播放录音时: 双击录音键为删除当前播放的录音文件, 长按录音键为切换 顺序播放/单曲循环(单曲循环时指示灯紫色常亮)。

1. Please use the supplied power cord when using. If you want to replace the power cord, please use the confirmed power cord under professional guidance.
2. Do not attempt to short the fuse inside the power outlet or use a fuse with an value.
3. Do not repair the machine yourself! Opening the case may expose your body to dangerous voltage or other hazardous conditions. For repair or maintenance, please contact qualified service personnel for service.
4. If you are a qualified service personnel, please note that the equipment needs to be repaired in case of any damage, including: broken power cable, damaged socket head, liquid inflow or solids falling into the equipment and equipment. a situation in which the machine is not working properly when placed in a humid or rainy environment
5. Do not store or use the speakers in a damp environment
6. Liquid-filled items such as vases should not be placed on the equipment
7. Unplug the power cord from the power outlet when the device is not in use for an extended period of time.
8. When you need to plug in the power cord to the outlet, be sure to keep away from the pedestrian channel and keep the power cord in time after use.
9. Make sure that the power socket to which the speaker's power cord is connected is properly grounded.

Follow all instructions and heed all warnings
KEEP THESE INSTRUCTIONS!

Thank you for choosing to purchase the **DM35S** drum speaker designed and manufactured by our company. Please read this manual carefully before using this product for the first time.

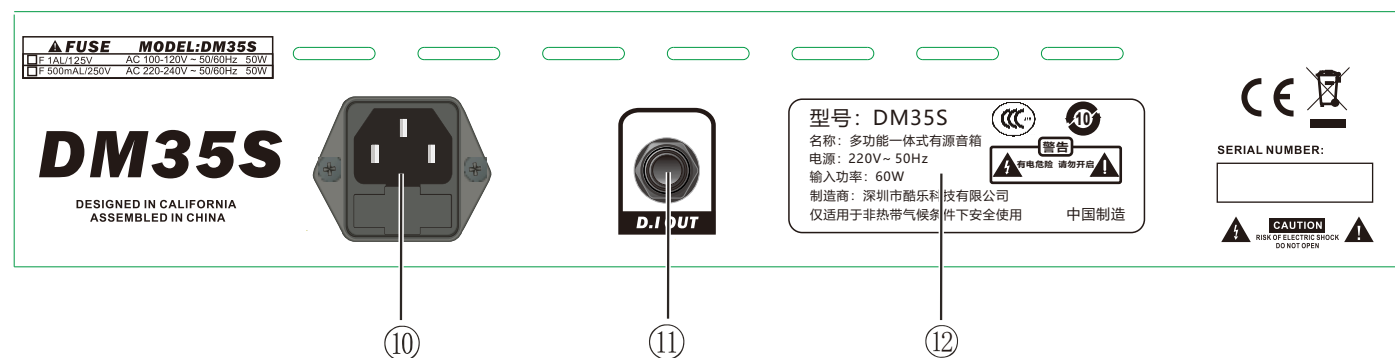

10. Power inlet socket 电源插孔

这是一个可切换电压的IEC电源插口, 用机器配置的电源线连接电源。

11. D.I. out 输出端口

该输出端口的信号直接来自前级放大信号, 通过该输出端口的信号可直接输入到调音台或者功率放大器

12. 本公司系列音箱产品, 通过国家CCC安全规格认证, 并依照CCC标准生产流程管理及生产。

SPECIFICATION

Power Output: 40W RMS

Power Consumption: 50W

Impedence

INPUT 1: 68k ohm

INPUT 2: 68k ohm

EQ

Bass: +/- 15dB@60Hz

Treble: +/- 15dB@10kHz

Speaker: Coaxial (10 inch woof + 1 inch tweeter)

Dimensions: 430mm*390mm*340mm (H*W*D)

Net Weight: 13KG

Gross Weight: 15KG